

CABLE SUSPENSION HARDWARE

WIRE MOUNT, CLIP & TURNBUCKLE INSTALLATION INSTRUCTIONS

Included in your installation kit:




4 Easy-to-follow Installation Steps:

1. **Securely anchor the base of the wire mount to the ceiling substrate and thread cable wire and tighten the set screw.**
2. **Fasten the turnbuckle to the floor, plumb with the top wire mount.**
3. **Attach panel clips to panel in desired locations and tighten the set screw. Thread wire through clips starting at the top of the panel working to the bottom.**
4. **Trim wire and insert into the bottom turnbuckle. Rotate the turnbuckle to tighten the wire tension and tighten the set screw.**

TIP: Watch installation how-to videos for more information:

www.standoffsystems.com/how-to-guides/

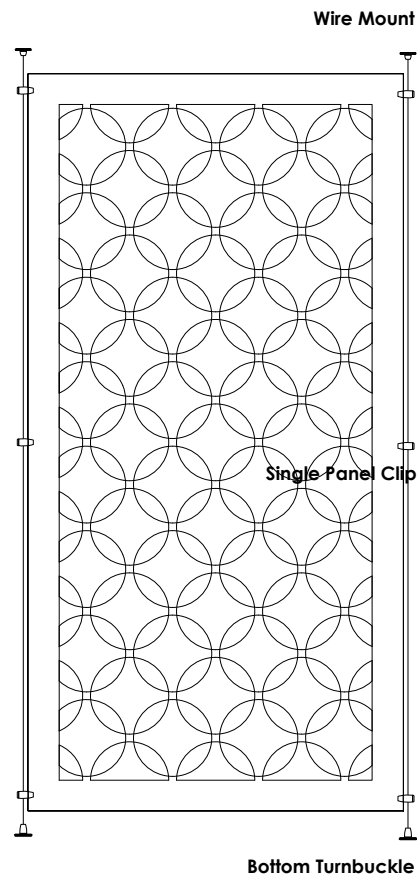

NOTE: Not all walls are plumb, square nor flat. Modifications may be necessary. It is your responsibility to determine the best installation method for your project based upon site conditions. Cable Suspension Hardware installation is not recommended for all patterns due to panel thickness. It is the sole responsibility of the installer to meet all building codes.